

Akku- Universalladegerät für Camcorder/Digitalkamera & auswechselbarer Batterie-Satz-Adapter



Beschreibung:

AKKU UNIVERSAL-LADEGERÄT:

Eingangsspannung: DC 12-24V
Ausgangsspannung: DC 8.4V
Ladestrom: 600mA (MAX)

Mit austauschbarem Anschluss für alle Modelle von Sony, JVC, Panasonic, etc.,

Mit Auto-Ladegerät und Ladegerät:

AC Adapter:

Eingangsspannung: AC 100-240V
Ausgangsspannung: DC 12.0V, 1A, 12W

KFZ Adapter:

Eingangsspannung: DC 12-24V
Ausgangsspannung: DC 4.2-12V

Maße: 106,5 x 69 x 37 mm

Bedienung:

- Stecken Sie den Stromadapter in eine Steckdose.
- Verbinden Sie den Stromadapter mit der DC-in-Buchse Ihres Ladegerätes.
- Die "STATUS"-LED leuchtet rot, wenn das Ladegerät bereit ist und die "CHARGE"-LED blinkt grün, solange sie auf das Akkupack wartet.
- Stecken Sie das Akkupack in das Ladegerät und die "CHARGE"-LED leuchtet rot, solange die Akkus geladen werden.
- Die "CHARGE"-LED leuchtet abwechselnd grün und rot auf, wenn die Akkus zu über 90% aufgeladen sind..
- Ist das Akkupack vollständig aufgeladen, leuchtet die "CHARGE"-LED dauerhaft grün.
- Nach dem Aufladen entnehmen Sie das Akkupack aus dem Ladegerät.
- Trennen Sie die Stromverbindung und die LEDs "CHARGE" und "STATUS" gehen aus.

Wartung:

- Laden nur bei Raumtemperatur.
- An kühlem, trockenem Ort aufbewahren.
- Mit einem weichen Tuch reinigen, wenn nötig.
- Bei Nichtgebrauch den Stromadapter aus der Steckdose entfernen.

Achtung!

Setzen Sie das Ladegerät niemals Feuer, Wasser oder Feuchtigkeit aus! Verwenden Sie nur den dafür vorgesehenen Stromadapter!

Bemerkung:

Wenn der Stromadapter nicht richtig angeschlossen ist, werden die LEDs "STATUS" und "CHARGE" nicht leuchten.



Eurotronic Products GmbH Fon: +49 (0)231 878 00 30
Gewerbeparkstr. 14 Fax: +49 (0)231 878 00 369
D - 44339 Dortmund e-Mail: info@eurotronic.net

www.eurotronic.net



& auswechselbarer Batterie-Satz-Adapter

Art.-Nr.	Für	Kompatibel mit	Typ	Adapter
90194	Blackberry	BLB BAT-03087-003	Plate for charger	LP729
90183	Blackberry	BLB BAT-06860-001	Plate for charger	LP710
90197	Canon	CAN BP-208/308/315	Plate for charger	LP508
90169	Canon	CAN BP-406/412	Plate for charger	LP406
90105	Canon	CAN BP-511/522	Plate for charger	LP511
90125	Canon	CAN BP-617/608	Plate for charger	LP608
90168	Canon	CAN BP-711	Plate for charger	LP711
90230	Canon	CAN BP-808/809/819	Plate for charger	LP808
90127	Canon	CAN BP-911/914	Plate for charger	LP914
90120	Canon	CAN NB-1L	Plate for charger	LP1
90102	Canon	CAN NB-2L	Plate for charger	LP234
90103	Canon	CAN NB-3L	Plate for charger	LP334
90122	Canon	CAN NB-4L	Plate for charger	LP46
90107	Canon	CAN NB-5H	Plate for charger	LP5
90175	Canon	CAN NB-5L	Plate for charger	LP56
90225	Canon	CAN NB-6L/SAM SLB10A	Plate for charger	LP6L
90226	Canon	CAN LP-E5/SAM 1A-BP85ST	Plate for charger	LPE5
90108	Casio	CAS NP-20	Plate for charger	LP20
90109	Casio	CAS NP-40	Plate for charger	LP240
90228	Casio	CAS NP-60/SAM 1A-BP85SW	Plate for charger	LPC60
90189	Dell	DELL T6476/T6845	Plate for charger	LP647
90217	Epson	EPS EU-97	Plate for charger	LP970
90212	Fuji	FUJ NP-30	Plate for charger	LP30
90111	Fuji	FUJ NP-40	Plate for charger	LP40
90224	Fuji	FUJ NP-50	Plate for charger	LPF50
90112	Fuji	FUJ NP-60	Plate for charger	LP60
90119	Fuji	FUJ NP-80	Plate for charger	LP80
90215	Fuji	FUJ NP-95	Plate for charger	LP95
90138	Fuji	FUJ NP-120/KLIC-5001	Plate for charger	LP61
90229	Fuji	FUJ NP-140	Plate for charger	LPF140
90023	IRiv	IRiv BP 009	Plate for charger	LP9
90101	JVC	JVA BN-V107	Plate for charger	LP107
90186	JVC	JVA BN-V207/214	Plate for charger	LP207
90114	JVC	JVA BN-V306	Plate for charger	LP306
90198	JVC	JVA BN-V37U	Plate for charger	LP37
90115	JVC	JVA BN-V408/416	Plate for charger	LP408
90176	JVC	JVA BN-V507/514	Plate for charger	LP507
90136	JVC	JVA BN-V607	Plate for charger	
90199	JVC	JVA BN-V712/714	Plate for charger	LP712
90219	JVC	JVA BN-V907U	Plate for charger	LP907
90117	JVC	JVA BN-VF707/VF707U/VF714/VF733	Plate for charger	LP707
90223	JVC	JVA BN-VF808	Plate for charger	
90137	JVC	JVC BN-VM200/VM200U	Plate for charger	LP208
90017	Kodak	KOD KLIC-7003	Plate for charger	LP773
90118	Kodak	KOD KLIC-5001/FUJ NP-120	Plate for charger	LP61
90139	Kodak	KOD KLIC-7000	Plate for charger	LP755
90216	Kodak	KOD KLIC-7001	Plate for charger	LP771
90172	Kodak	KOD KLIC-7002	Plate for charger	LP772
90116	Konika	KON DR-LB1	Plate for charger	LP51
90106	Konika	KON DR-LB4	Plate for charger	LP4
90182	Kyoceira	KYO BP-1100S	Plate for charger	LP411
90210	Kyoceira	KYO BP-760S	Plate for charger	LP760
90121	Kyoceira	KYO BP-780S	Plate for charger	LP22
90123	Minolta	MIN NP-200	Plate for charger	LP202



& auswechselbarer Batterie-Satz-Adapter

Art.-Nr.	Für	Kompatibel mit	Typ	Adapter
90124	Minolta	MIN NP-400	Plate for charger	LP400
90126	Minolta	MIN NP-700	Plate for charger	LP700
90143	Minolta	MIN NP-900	Plate for charger	LP249
90024	MOL	MOL MCR 182IH	Plate for charger	LP182I
90128	Nikon	NIK EN-EL1	Plate for charger	LP112
90129	Nikon	NIK EN-EL2	Plate for charger	LP125
90130	Nikon	NIK EN-EL3	Plate for charger	LP135
90131	Nikon	NIK EN-EL5	Plate for charger	LP155
90132	Nikon	NIK EN-EL7	Plate for charger	LP177
90134	Nikon	NIK EN-EL8	Plate for charger	LP189
90020	Nikon	NIK EN-EL9	Plate for charger	LP196
90227	Nikon	NIK EN-EL11/OLI Li-50B	Plate for charger	LP111
90135	Olympus	OLY BLM-1	Plate for charger	LP101
90144	Olympus	OLY CR-V3	Plate for charger	LP3
90133	Olympus	OLY LI-10B	Plate for charger	LP110
90145	Olympus	OLY LI-30B	Plate for charger	LP130
90171	Olympus	OLY LI-40B	Plate for charger	LP140
90019	Olympus	OLY PS BLS1	Plate for charger	LP106
90190	Olympus	OLY PS-BLL1	Plate for charger	LP102
90187	Palm	PalmOne 157-10014-00	Plate for charger	LP650
90018	Panasonic	PAN CGA S008	Plate for charger	LP168
90158	Panasonic	PAN CGA-DU07	Plate for charger	LP407
90148	Panasonic	PAN CGA-S003	Plate for charger	LP21
90193	Panasonic	PAN CGA-S005	Plate for charger	LP128
90170	Panasonic	PAN CGA-S007E	Plate for charger	LP171
90181	Panasonic	PAN CGA-S303	Plate for charger	LP303
90159	Panasonic	PAN CGR-D120	Plate for charger	LP120
90156	Panasonic	PAN CGR-V610	Plate for charger	LP610
90218	Panasonic	PAN DMW-BC7	Plate for charger	LP7
90104	Panasonic	PAN DMW-BCA7	Plate for charger	LP17
90188	Panasonic	PAN DMW-BCB7	Plate for charger	LP187
90140	Panasonic	PAN DMW-BM7	Plate for charger	LP77
90025	QTE	QTE ST26A, 40700102	Plate for charger	LP263
90211	Ricoh	RIC DB-50	Plate for charger	LP850
90022	Samsung	SAM ELB 1137C	Plate for charger	LP793
90142	Samsung	SAM SB-L110/L220	Plate for charger	LP16
90213	Samsung	SAM SB-L70G	Plate for charger	LP870
90160	Samsung	SAM SB-LSM160/LSM80	Plate for charger	LP800
90220	Samsung	SAM SB-P90A	Plate for charger	LP900
90021	Samsung	SAM SLB 0837 (B)	Plate for charger	LP413
90196	Samsung	SAM SLB-1974	Plate for charger	LP815
90147	Sanyo	SAN DB-L20	Plate for charger	LP132
90177	Sanyo	SAN DB-L40	Plate for charger	LP410
90221	Sanyo	SAN UR121/124	Plate for charger	LP122
90192	Sharp	SHP BT-L1/2/2U	Plate for charger	LP2
90214	Sharp	SHP BT-L221/241	Plate for charger	LP221
90162	Sharp	SHP BT-L225/L445	Plate for charger	LP225
90163	Sharp	SHP BT-L226U	Plate for charger	LP226
90180	Sharp	SHP BT-L31	Plate for charger	LP31
90179	Sharp	SHP BT-L43	Plate for charger	LP43
90178	Sharp	SHP BT-L44	Plate for charger	LP44
90174	Sony	SON NP-BG1	Plate for charger	LP181
90184	Sony	SON NP-F100/200	Plate for charger	LP200
90173	Sony	SON NP-FA50/FA70	Plate for charger	LP555



& auswechselbarer Batterie-Satz-Adapter

Art.-Nr.	Für	Kompatibel mit	Typ	Adapter
90149	Sony	SON NP-FC10	Plate for charger	LP10
90153	Sony	SON NP-FE1	Plate for charger	LP577
90150	Sony	SON NP-FF50/FF70	Plate for charger	LP50
90151	Sony	SON NP-FM50	Plate for charger	LP550
90152	Sony	SON NP-FP50/70/90	Plate for charger	LP55
90154	Sony	SON NP-FS10/FS11	Plate for charger	LP111
90155	Sony	SON NP-FT1	Plate for charger	LP113
90185	Sony	SON PSP-110	Plate for charger	LP210
90191	Symatec	SYM SM-470i/SM-360	Plate for charger	LP560