

# Camcorder/Digital Camera Li-Ion Battery Pack Charger

With Interchangeable Battery Pack Adapter



## Description

- Input: 110 - 220V
- Output: 12V 500mA
- With replaceable plate for all models of Sony, JVC, Panasonic, etc
- Within car charger and main charger
- Dimensions: 106.5 x 69 x 37mm

## Instructions:

- Plug the AC power adapter in a wall outlet.
- Connect the AC power adapter supplied with your charger to the DC in-jack.
- "STATUS" LED indicator shows RED when the charger is ready and "CHARGE" LED indicator shows flashing GREEN when waiting for battery pack.
- Slide battery pack into the Charger and "CHARGE" LED indicator turns RED when charging.
- "CHARGE" indicator flashes RED and GREEN alternatively when battery pack has been charged to over 90%.
- When the battery pack is fully charged, the "CHARGE" LED indicator turns steady green.
- After the battery pack fully charged slide the battery pack out.
- Unplug power, "CHARGE" and "STATUS" indicator go out.

## Maintenance:

- Charge at room temperature
- Store in cool and dry place
- Clean up the terminals with a soft cloth if soiled
- Unplug AC power adapter when not in use

## Caution & Warning:

Do not expose the product to fire, water or moisture  
Do not use AC power adapter other than specified by manufacturer.



## Notes:

While charging the battery pack, "STATUS" and "CHARGE" LED indicators will not light if the AC power adapter is not connected properly

Eurotronic Products GmbH Fon: +49 (0)231 878 00 30  
Gewerbeparkstr. 14 Fax: +49 (0)231 878 00 369  
D - 44339 Dortmund e-Mail: info@eurotronic.net

[www.eurotronic.net](http://www.eurotronic.net)

# Camcorder/Digital Camera Li-Ion Battery Pack Charger

With Interchangeable Battery Pack Adapter

Art.-No.	Compatible with	Compatible with	Plate name
90100		Universal Akku-Ladegerät Digicam 1.000 mAh	
90200		Universal Akku-Ladegerät Digicam 500 mAh	
90300	englische Power Connector	Universal Akku-Ladegerät Digicam 500 mAh	
90194	Blackberry	BLB BAT-03087-003 plate f. charger	LP729
90183	Blackberry	BLB BAT-06860-001 plate f. charger	LP710
90197	Canon	CAN BP-208/308/315 plate f. charger	LP508
90169	Canon	CAN BP-406/412 plate f. charger	LP406
90105	Canon	CAN BP-511/522 plate f. charger	LP511
90125	Canon	CAN BP-617/608 plate f. charger	LP608
90168	Canon	CAN BP-711 plate f. charger	
90230	Canon	CAN BP-808/809/819 plate f. charger	LP808
90127	Canon	CAN BP-911/914 plate f. charger	LP914
90226	Canon	CAN LP-E5/SAM 1A-BP85ST plate f. charger	LPE5
90120	Canon	CAN NB-1L plate f. charger	LP1
90102	Canon	CAN NB-2L plate f. charger	LP234
90103	Canon	CAN NB-3L plate f. charger	LP334
90122	Canon	CAN NB-4L plate f. charger	LP46
90107	Canon	CAN NB-5H plate f. charger	LP5
90175	Canon	CAN NB-5L plate f. charger	LP56
90225	Canon	CAN NB-6L/ SAM SLB10A plate f. charger	LP6L
90108	Casio	CAS NP-20 plate f. charger	LP20
90109	Casio	CAS NP-40 plate f. charger	LP240
90228	Casio	CAS NP-60/SAM 1A-BP85SW plate f. charger	LPC60
90189	Dell	DELL T6476/T6845 plate f. charger	LP647
90217	Epson	EPS EU-97 plate f. charger	LP970
90212	Fuji	FUJ NP-30 plate f. charger	LP30
90111	Fuji	FUJ NP-40 plate f. charger	LP40
90224	Fuji	FUJ NP-50 plate f. charger	LPF50
90112	Fuji	FUJ NP-60 plate f. charger	LP60
90119	Fuji	FUJ NP-80 plate f. charger	LP80
90215	Fuji	FUJ NP-95 plate f. charger	LP95
90138	Fuji	FUJ NP-120/KLIC-5001 Aufsatz für Ladegerät	LP61
90229	Fuji	FUJ NP-140 Aufsatz für Ladegerät	LPF140
90023	IRiv	IRiv BP 009 plate f. charger	LP9
90101	JVC	JVC BN-V107 plate f. charger	LP107
90186	JVC	JVC BN-V207/214 plate f. charger	LP207
90114	JVC	JVC BN-V306 plate f. charger	LP306
90198	JVC	JVC BN-V37U plate f. charger	LP37
90115	JVC	JVC BN-V408/416 plate f. charger	LP408
90176	JVC	JVC BN-V507/514 plate f. charger	LP507
90136	JVC	JVC BN-V607 plate f. charger	
90199	JVC	JVC BN-V712/714 plate f. charger	LP712
90219	JVC	JVC BN-V907U plate f. charger	LP907
90117	JVC	JVC BN-VF707/VF707U/VF714/VF733 Aufsatz f. Ladeg.	LP707
90223	JVC	JVC BN-VF808 Aufsatz f. Ladeg.	
90137	JVC	JVC BN-VM200/VM200U plate f. charger	LP208
90017	Kodak	KOD KLIC-7003 plate f. charger	LP773
90118	Kodak	KOD KLIC-5001/FUJ NP-120 plate f. charger	LP61
90139	Kodak	KOD KLIC-7000 plate f. charger	LP755

# Camcorder/Digital Camera Li-Ion Battery Pack Charger

With Interchangeable Battery Pack Adapter

Art.-No.	Compatible with	Compatible with	Plate name
90216	Kodak	KOD KLIC-7001 plate f. charger	LP771
90172	Kodak	KOD KLIC-7002 plate f. charger	LP772
90116	Konika	KON DR-LB1 plate f. charger	LP51
90106	Konika	KON DR-LB4 plate f. charger	LP4
90182	Kyoceira	KYO BP-1100S plate f. charger	LP411
90113	Kyoceira	KYO BP-406/412 plate f. charger	LP406
90210	Kyoceira	KYO BP-760S plate f. charger	LP760
90121	Kyoceira	KYO BP-780S plate f. charger	LP22
90123	Minolta	MIN NP-200 plate f. charger	LP202
90124	Minolta	MIN NP-400 plate f. charger	LP400
90126	Minolta	MIN NP-700 plate f. charger	LP700
90143	Minolta	MIN NP-900 plate f. charger	LP249
90024	MOL	MOL MCR 1821H plate f. charger	LP1821
90020	Nikon	NIK EN-EL9 plate f. charger	LP196
90128	Nikon	NIK EN-EL1 plate f. charger	LP112
90129	Nikon	NIK EN-EL2 plate f. charger	LP125
90130	Nikon	NIK EN-EL3 plate f. charger	LP135
90131	Nikon	NIK EN-EL5 plate f. charger	LP155
90132	Nikon	NIK EN-EL7 plate f. charger	LP177
90134	Nikon	NIK EN-EL8 plate f. charger	LP189
90020	Nikon	NIK EN-EL9 plate f. charger	LP196
90227	Nikon	NIK EN-EL11/OL1 Li-50B plate f. charger	LP111
90135	Olympus	OLY BLM-1 plate f. charger	LP101
90144	Olympus	OLY CR-V3 plate f. charger	LP3
90133	Olympus	OLY LI-10B plate f. charger	LP110
90145	Olympus	OLY LI-30B plate f. charger	LP130
90171	Olympus	OLY LI-40B plate f. charger	LP140
90019	Olympus	OLY PS BLS1 plate f. charger	LP106
90190	Olympus	OLY PS-BLL1 plate f. charger	LP102
90187	Palm	PalmOne 157-10014-00 plate f. charger	LP650
90158	Panasonic	PAN CGA-DU07 plate f. charger	LP407
90148	Panasonic	PAN CGA-S003 Aufsatz Ladegerät	LP21
90193	Panasonic	PAN CGA-S005 plate f. charger	LP128
90170	Panasonic	PAN CGA-S007E plate f. charger	LP171
90018	Panasonic	PAN CGA S008 plate f. charger	LP168
90181	Panasonic	PAN CGA-S303 plate f. charger	LP303
90026	Panasonic	PAN CGR-V620 plate f. charger	LP62
90166	Panasonic	PAN CGR-D07S Aufsatz Ladegerät	
90159	Panasonic	PAN CGR-D120 plate f. charger	LP120
90156	Panasonic	PAN CGR-V610 plate f. charger	LP610
90218	Panasonic	PAN DMW-BC7 plate f. charger	LP7
90104	Panasonic	PAN DMW-BCA7 plate f. charger	LP17
90188	Panasonic	PAN DMW-BCB7 plate f. charger	LP187
90140	Panasonic	PAN DMW-BM7 plate f. charger	LP77
90025	QTE	QTE ST26A, 40700102 plate f. charger	LP263
90211	Ricoh	RIC DB-50 plate f. charger	LP850
90195	Rollei	ROL 02491-0028-00 plate f. charger	LP830
90022	Samsung	SAM ELB 1137C plate f. charger	LP793
90161	Samsung	SAM SBL-1437 plate f. charger	
90142	Samsung	SAM SB-L110/L220 plate f. charger	LP16

# Camcorder/Digital Camera Li-Ion Battery Pack Charger

With Interchangeable Battery Pack Adapter

Art.-No.	Compatible with	Compatible with	Plate name
90213	Samsung	SAM SB-L70G plate f. charger	LP870
90160	Samsung	SAM SB-LSM160/LSM80 plate f. charger	LP800
90220	Samsung	SAM SB-P90A plate f. charger	LP900
90021	Samsung	SAM SLB 0837 (B) plate f. charger	LP413
90196	Samsung	SAM SLB-1974 plate f. charger	LP815
90157	Sanyo	SAN DB-L10 plate f. charger	LP110
90147	Sanyo	SAN DB-L20 plate f. charger	LP132
90177	Sanyo	SAN DB-L40 plate f. charger	LP410
90221	Sanyo	SAN URI21/124 plate f. charger	LP122
90192	Sharp	SHP BT-L1/2/2U plate f. charger	LPL2
90214	Sharp	SHP BT-L221/241 plate f. charger	LP221
90162	Sharp	SHP BT-L225/L445 plate f. charger	LP225
90163	Sharp	SHP BT-L226U plate f. charger	LP226
90180	Sharp	SHP BT-L31 plate f. charger	LP31
90179	Sharp	SHP BT-L43 plate f. charger	LP43
90178	Sharp	SHP BT-L44 plate f. charger	LP44
90174	Sony	SON NP-BG1 plate f. charger	LP181
90184	Sony	SON NP-F100/200 plate f. charger	LP200
90173	Sony	SON NP-FA50/FA70 plate f. charger	LP555
90149	Sony	SON NP-FC10 plate f. charger	LP10
90153	Sony	SON NP-FE1 plate f. charger	LP577
90150	Sony	SON NP-FF50/FF70 plate f. charger	LP50
90151	Sony	SON NP-FM50 plate f. charger	LP550
90152	Sony	SON NP-FP50/70/90 plate f. charger	LP55
90154	Sony	SON NP-FS10/FS11 plate f. charger	LP111
90155	Sony	SON NP-FT1 plate f. charger	LP113
90185	Sony	SON PSP-110 plate f. charger	LP210
90191	Symatec	SYM SM-470i/SM-360 plate f. charger	LP560